

Ordre montage composants		
Réf.	Valeur	Boîtier
C2	1nF	SM0603
C3	1nF	SM0603
C5	1nF	SM0603
C6	1nF	SM0603
C9	1nF	SM0603
C11	1nF	SM0603
C4	10nF	SM0603
C13	10nF	SM0603
C7	0,1µF	SM0603
C8	0,1µF	SM0603
C10	100n	SM0603
C12	0,1µF	SM0603
R3	0	SM0805
R4	0	SM0805
R5	0	SM0805
R6	0	SM0805
R7	0	SM0805
R16	1k	SM1206
R13	1,5k	SM1206
R24	1,8k	SM1206
R26	10k	SM1206
R18	47k	SM1206
C14	4,7µF	SM1210L
C16	4,7µF	SM1210L
C15	10µF	SM1210L
Err. CI	Strap	
R17	Strap	
D1	1N5818	
D2	1N5818	
R10	8,2k	
R22	10k	
R11	47k	
R25	100k*	
R15	120k*	
J17	V+	
J18	V+	
J19	Masse	
J20, J21	Strap tmp	
U6	LP2950-50	
U7	LP2950-33	
Tester alimentations		
P1	SMA (BNC ?)	
R1	100	2xSM0805
P2	COAX	
U1	AD8362	
U2	MAX9613	
U3	MSP430-28	
R19	10k	Ajust.
R12	1k	Ajust.
R23	1k	Ajust.
R14	47k	Ajust.
J1-J16	JIO	
Hors circuit Imprimé		
U4	LCD	
P2	BNC	
SW1	Inter	Dis.
R31	330	Dis.
R32	50	Dis.
D3	DEL	Dis.
Com.	2C-4P	Dis.